



Segway® Human Transporter (HT) Airline Travel and Shipping Case i & p Series models only



Kit Contents

- > (1) Case
- > (1) Instructions
- > (1) Segway HT Limited Warranty

Tools Required

- > 4mm Hex Wrench (included)



Questions?

If you are missing a part, or if you need to return the product, please contact Segway Customer Operations at 1.866.4SEGWAY (1.866.473.4929) or on our website at www.segway.com/support/contact_us.html. Check www.segway.com for updates to this document. Thank you.



WARNING!

Always shut down your Segway HT and unplug the Power Cord before performing any maintenance or installing any part or accessory.

Follow these instructions carefully. Failure to follow these instructions could damage your Segway HT and render it unsafe to use.

LIMITED WARRANTY

The Segway HT Airline Travel and Shipping Case is an "Accessory Part" covered by the Segway™ Human Transporter Limited Warranty (copy delivered with the kit.)

> Using the Airline Travel & Shipping Case.

Step 1 Fully lower the Control Shaft. Loosen the Control Shaft fastener using the 4mm Hex Wrench included with you HT. Remove the Control Shaft from the base of the HT and disconnect the two coily cord cables.

Step 2 Remove the lid of case by turning the Latch Knob until the Latch releases. Be sure that the Latch and Latch Knob lay flush against the case after the Latch releases. Set the lid aside.




Step 3 Locate the Harness Straps inside of the case. Take the end of the Harness Strap and attach it to the outside of case using the snaps.



Step 4 Tip the case on its side, making sure that the Harness Straps are on the top-side of the case. Position the two clasps so that they hang outside of the case.



Step 5 Roll the base of the HT towards the case and align wheels to the ramp cut-out's in the foam. Push the base of the HT into the case and rotate so that it is tilted backward. It should be tilted backward until bottom of the machine is touching the two foam strips on the bottom of the case.

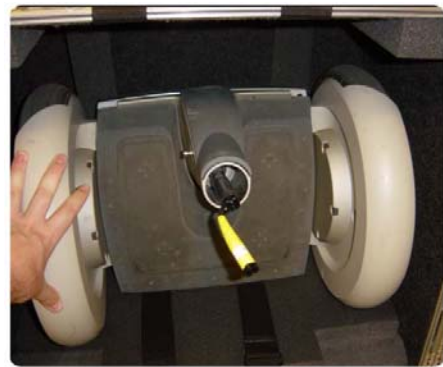

Step 6 Tilt the case back to its original position using the two handles. Secure the base of the machine in the case by clipping the Harness Straps together. Tighten the straps so that the base of the machine remains immobile.



Step 7 Place the Handlebars into the lid of the case and secure them using the hook and loop fasteners. Place lid on case and close the Latches using the Latch Knobs.



Step 8 Tip case over onto its wheels using the handles. Be sure that the Telescoping Handle is positioned on top of the case.

We hope this procedure provided clear step-by-step instructions. If you feel these instructions are incorrect in any way, we would like to hear from you. Please contact Segway Customer Support at 1-866-4SEGWAY or go to www.segway.com if you have any questions, comments or suggestions. Thank you!