



Pedestrian Alert Installation Instructions

e Series, i Series and p Series Models

Kit Number: 1748500001



Contents

- 1 bell with bracket
- 1 washer
- 1 rubber post
- 1 M6 X 30 fastener

Tools Required

- 4mm hex wrench



WARNING

Always shut down your Segway HT and unplug the charge cord before performing any maintenance or installing any part or accessory.

Follow these instructions carefully. Failure to follow these instructions could damage your Segway HT and render it unsafe to use.

> Installation

Step 1

Remove existing fastener from the underside of the right handlebar.

Step 2

Thread fastener through washer and rubber post.

Step 3

Push rubber post through hole in bell bracket. (as shown)

Step 4

Partially insert fastener into side of handlebar threaded insert.


Step 5

Position bell as shown so that it can be easily activated using right hand.


Step 6

Tighten fastener. Rubber will expand so that bell is secure.

Included Parts

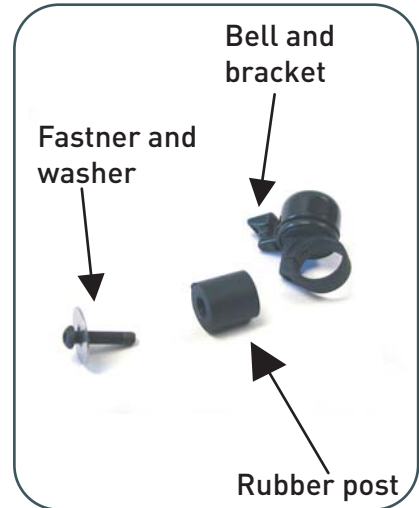

Step 3

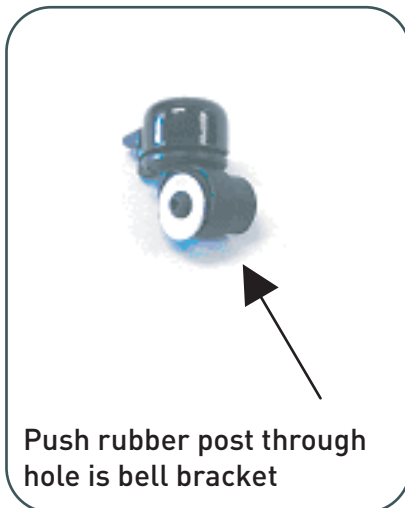

Step 4 & 5

Position bell under right handlebar



LIMITED WARRANTY The Segway HT Pedestrian Alert is an accessory covered by the Segway™ Human Transporter Limited Warranty (copy delivered with this kit).



Questions?

If you are missing a part, or if you have any questions, please contact Segway Customer Service at 866.4SEGWAY (866.473.4929) or www.segway.com/support/contact_us.html. Thank you.